

# HELIOS

POWER SOLUTIONS

## User's Manual


### SR750HL Power Supply/ Float Charger for Lead Acid Batteries 750W



#### STANDARD FEATURES



3 Relay Alarms-Form C




Float Charger –Lead Acid Batteries

#### OPTIONAL FEATURES




##### Comms:


- RS232
- RS485
- Modbus RTU
- SNMP V1 & Webpages




Customizable Digital I/O



Temperature Sensor on 1.7m lead with adhesive pad: -4mV / °C / cell ±10%

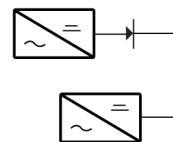

N+1 Redundancy



Rack Mounting



Internal Meter

7/07/2022



## Table of Contents

1. <a href="#">SAFETY</a> .....	4
2. <a href="#">INTRODUCTION</a> .....	5
3. <a href="#">FRONT PANEL LAYOUT</a> .....	5
4. <a href="#">LED INDICATION CODE</a> .....	6
5. <a href="#">ALARM TECHNICAL LAYOUT</a> .....	6
6. <a href="#">COMMS PORTS</a> .....	6
7. <a href="#">FRAME GROUND</a> .....	6
8. <a href="#">MODEL CODING AND OPTIONS</a> .....	7
9. <a href="#">N+1 REDUNDACY</a> .....	7
10. <a href="#">CONNECTION NOTES</a> .....	7
11. <a href="#">TECHNICAL SPECS</a> .....	8
12. <a href="#">H SERIES OPTIONAL INTERNAL METER</a> .....	11
13. <a href="#">CUSTOMISED MODELS</a> .....	12
14. <a href="#">TERMS OF WARRANTY</a> .....	12

## 1. SAFETY

The user is responsible for ensuring that input and output wiring segregation complies with local standards and that in the use of the equipment, access is confined to operators and service personnel. A low resistance earth connection is essential to ensure safety and additionally, satisfactory EMI suppression (see below).

### **HAZARDOUS VOLTAGES EXIST WITHIN A POWER SUPPLY ENCLOSURE AND ANY REPAIRS MUST BE CARRIED OUT BY A QUALIFIED SERVICEPERSON.**

#### Electrical Strength Tests

Components within the power supply responsible for providing the safety barrier between input and output are constructed to provide electrical isolation as required by the relevant standard. However EMI filtering components could be damaged as result of excessively long high voltage tests between input, output and ground. Please contact our technicians for advice regarding electric strength tests.

#### Earth Leakage

Where fitted, EMC suppression circuits cause earth leakage currents which may be to a maximum of 3.5mA.

#### Ventilation

High operating temperature is a major cause of power supply failures, for example, a 10°C rise in the operating temperature of a component will halve its expected life. Therefore always ensure that there is adequate ventilation for the equipment. Batteries in particular suffer shortened lifetimes if subjected to high ambient temperatures.

#### Water / Dust

Every effort must be made in the installation to minimise the risk of ingress of water or dust. Water will almost always cause instant failure. The effects of dust are slower in causing failure of electronic equipment but all electrical equipment should be cleaned free of any dust accumulation at regular intervals.

#### Electromagnetic Interference (EMI)

Switching power supplies and converters inherently generate electrical noise. All wiring should be as short as practicable and segregated from all equipment wiring which is sensitive to EMI. Residual noise can be reduced by looping DC wiring through ferrite cores (sleeves). These are most effective as close to the power supply as possible and as many turns of the wire taken through the core (+ and - in the same direction) as the core will accommodate.

#### External fuse protection

Fuses or circuit breakers must be used in all battery circuits to protect against short circuits. External fuses should be used for power supplies/chargers even though they are usually internally protected.

#### Connection polarity

It is critical to check the polarity carefully when connecting DC devices even with models which have non-destructive reverse polarity protection.

### Glossary of terms used in our user manuals

**PSU** = power supply unit

**BCT** = battery condition test

**ECB** = electronic circuit breaker

**ELVD** = electronic low voltage disconnect

**RPP** = reverse polarity protection

**EMI** = electromagnetic interference

**SNMP** = Simple Network Management Protocol



**EMC** = Electromagnetic compatibility

**DOD** = depth of discharge

**2. INTRODUCTION:**

The SR750HL range is designed for use as a reliable and stable AC to DC power supply, or float charger for lead acid batteries. Note that for float charging the output voltage must be set to approximately 15% above the nominal battery voltage models. This is done as the default voltage for the 12V model but must be specified at time of order for all higher voltage models.

**3. FRONT & BACK PANEL LAYOUT**

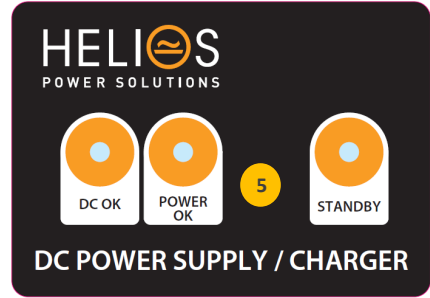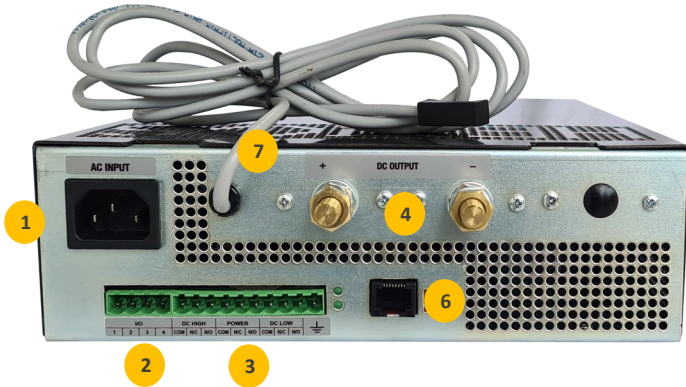

1. **AC INPUT IEC60320 - C13 10A**
2. **Digital Inputs (pins 1,2)/ Input or Output (pin 3)/ Return (pin 4) I/O terminals** are customizable and if used, the product will have a unique code.
3. **ALARMS RELAY FORM C:** Relay contacts shown in de-energised state (ie. When there is a fault condition). Alarm relays are energised when power supply is operating normally, eg. "Power" alarm relay is energised when input voltage present.
  - **DC HIGH:** DC Output High.
  - **POWER:** Loss of mains input power. This alarm has 30 seconds delay before activation upon mains failure. PSU fails
  - **DC LOW:** DC Output Low or Battery voltage low if used as a charger.
  - **Fan Fail/Stall:** There are two fans inside the SR750HL unit and will give an alarm with one or both of the fan is stalled or failed. When fan is stall/fail alarm occurs is display through the DC high alarm relay ( DC high relay will toggle every 5 seconds) and slow flashing of the POWER OK LED. If a fan fail/stall occurs at the same time as DC High, the relay will activate like normal, but every 5 seconds it will toggle showing fan fail/stall alarm.
4. **DC CONNECTIONS:** M8 brass stud (shown on the picture above ), plug-in style phoenix socket & mating screw terminal and plug-in style Anderson connector options. Where screw/plug in terminals are fitted both terminals must be used if the power supply current exceeds 20A. This is to ensure that the current rating.



Plug-in style Phoenix DC Terminals



Plug-in style Anderson DC Terminals

**4. LED INDICATIONS CODE**

**DC OK:** DC output is present, either from PSU or battery

**POWER OK:** Mains fail and/ Or internal PSU fail.

**STANDBY:** Power supply unit off

DC OK	POWER OK	STANDBY	Condition
			System Normal: Input power on, Battery output levels ok
			DC Output Low: Input power on <b>and</b> battery has discharged to < Battery Low
			DC Output High: Input power on, Battery output high
			Mains fail: No mains and battery output levels low
			Fan fail/stall: Input power on and DC OK. The Power OK LED will slow flash during this 5 second period
			Fan fail/stall and DC High alarm on: DC OK LED will fast flash to show DC high alarm. Power OK LED will slow flash to show fan fail/stall
			PSU is in standby: Turns the output of the power supply off. If there is a battery connected, the DC OK LED remains on even though the power supply in turned off ( except for -P versions with output diode)
			PSU is in standby <b>and</b> battery has discharged to < Battery Low

LEGEND : =On =fast flash =slow flash =Off

**5. ALARM TERMINAL LAYOUT**

I/O				DC HIGH			POWER			DC LOW			
1	2	3	4	COM	N/C	N/O	COM	N/C	N/O	COM	N/C	N/O	

Relay contacts shown in **de-energised** state ( ie when there is a fault condition). Alarm relay are energised when power supply is operating normally. **DC OK** alarm indicates either DC low or DC high.

**6. COMMS PORT**

- RS232 (ASCII) <https://www.heliosps.com/sr-series-downloads/#rs232-rs485-commands-sr-series>
- RS485 (ASCII) <https://www.heliosps.com/sr-series-downloads/#rs232-rs485-commands-sr-series>
- Modbus RTU <https://www.heliosps.com/sr-series-downloads/#serial-modbus-rtu-sr-series>
- SNMP, Webpages <https://www.heliosps.com/sr-series-downloads/#snmp-sr-series>


Note: A battery is required on the output for the communications to continue working in the event of an input/internal converter failure.

**7. FG - FRAME GROUND**

Where provided this terminal provides a connection to the metal case for earthing.

## 8. MODEL CODING AND OPTIONS

**SR750HL 12 T F X L DC 485+**

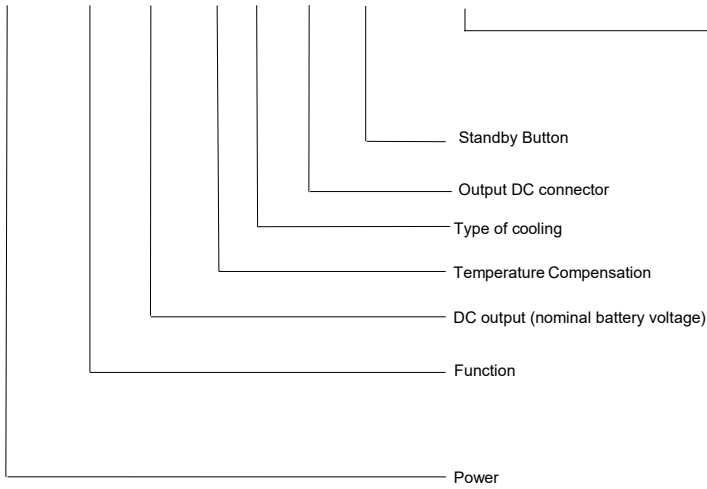

### Options:

**485** = RS485, **232** = RS232, **LAN+**=SNMP/Webpages, **485+**=Modbus RTU

**DC** = 90-135VDC input (blank = AC input) **U** = 110VAC optional input voltage

Turns output on/off

**X** = Pluggable connector **S**= Stud **A**= Anderson Connectors

**F** = Fan

**T** = Yes **Blank** = No

**12, 24, 30, 36, 48VDC**

**HL** = DC PSU/charger

**HI** = **No-Break™** DC UPS - 3 terminal output (separate battery output (See separate datasheet))

**750W**

## 9. N+1 REDUNDANCY

An external diode is required for N+1 redundancy or parallel applications. A diode and DC Power Supply can be installed in a 2U Rack as shown in the picture below. Please contact our sales technical engineers so we can configure a DC Power Solution according your specific requirements.



SR500-750HL unit with external diode into 2U Rack

## 10. CONNECTION NOTES

- The models with the screw/unpluggable connectors have two terminals per polarity, each one is rated at 20A and so when the load current exceeds 20A both terminals must be used.
- If used as a battery charger ensure that the battery polarity matches the power supply /charging output.
- Alarms can be tested by using an external variable voltage supply.

## 11. TECHNICAL SPECIFICATIONS

<b>Output power</b>	750W (0-50°C )
<b>Input Voltage</b>	180V - 264VAC 45-65Hz 88V - 132VAC 45-65Hz ( Optional)
<b>Output Voltages</b>	13.8V, 24, 30V, 36V, 48 V Other voltages by request
<b>Voltage Adj. Range</b>	85% - 120% of Vnominal
<b>Fusing/ protection</b>	Input fuse and Varistor
<b>Overcurrent protection</b>	Constant current limit under overload and short circuit conditions
<b>Isolation</b>	Input – earth – 2.5KVdc Output – earth - 750Vdc
<b>Efficiency</b>	> 85%
<b>Inrush Current</b>	Soft start circuit
<b>Operating temperature</b>	-20 to 50 °C ambient at full load
<b>Humidity</b>	0 - 95% relative humidity non - condensing
<b>OVP</b>	Over-voltage protection on output at 130% of nominal output voltage
<b>Cooling</b>	Dual Fan Cooled
<b>LED Indication</b>	Green: DC OK Green: Power OK Flash code for different operating states
<b>Alarms Relay</b>	Form C contacts changeover, rated 30VDC,2A/110VDC,0.3A/125VAC,0.5A 30VDC, 2A/110VDC, 0.3A, 125VAC, 0.5A DC High ( Fan fail/stall (toggle every 5 sec)) POWER (mains fail, PSU fail) DC Low
<b>Line Regulation</b>	<0.2% over AC input range
<b>Load Regulation</b>	<0.4% open circuit to 100% load
<b>Noise</b>	<1%

## OPTIONS

<b>Optional Input Voltage</b>	88 - 132 VAC 110VDC (88V – 135VDC)
<b>Optional DC Input Voltage</b>	Please note that an external fuse or MCB must be fitted on the output for short circuit protection.
<b>Communication Port</b>	RS232 (ASCII) RS485 (ASCII) Modbus RTU SNMP, Webpages
<b>Digital Inputs/Outputs</b>	Digital Input (pins 1,2) / Input or Output (pin 3) / Return (pin 4)
<b>Temp. Compensation</b>	Temperature sensor on 1.7m lead with adhesive pad: -4mV / °C / cell ±10%
<b>Internal Meter</b>	Internal V/I meter displaying PSU operating states and analogue
<b>Mounting</b>	Standalone 19" Rack Mount - Optional V/I meter for subrack : SR-Meter
<b>N+1 Redundancy</b>	Using 2 chargers each with its own battery & output diodes
<b>Conformal Coating</b>	For harsh environments



## PHYSICAL

AC input connector	IEC60320— C13 10A input socket (similar to PCs etc)
DC Connections	<ul style="list-style-type: none"> <li>• M8 brass stud</li> <li>• Plug-in style phoenix socket &amp; mating screw terminal</li> <li>• Anderson plug-in style connectors</li> </ul>
Alarm connections	Plug in screw terminal block
Enclosure	Zinc plated & powder coated steel
Dimensions	225W x 304D x 70H (± 1mm)
Weight	3.85 Kg


## STANDARDS

EMC	To CISPR 22 / EN55022 Class A
Safety	To IEC950 / EN60950 / AS/NZS3260

## 12. H-SERIES INTERNAL METER OPTION

SR500H & SR750H L & I models both have the internal meter option and the parameters displayed vary depending on the model.

The H-Series internal meter shows the status of the PSU and Battery (**just for HI models**) which has certain meanings. Check below each one of them to understand the information displayed.

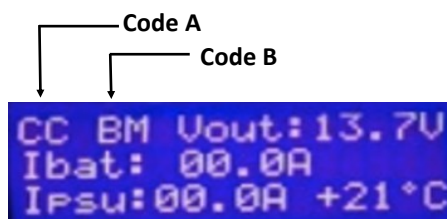

*H-Series internal meter example display*

**SR500/750HL model with Internal meter:**

### Code A:

- CC – charge cycle (normal operation)
- MF – mains fail (mains failure, system on battery power)
- OL – system overloaded, output voltage is below Vpres setting

### Code B:

- M? – possible mains fail, ie. No mains detected but brown out timer not expired (30sec)
- BP – System OK
- BM – DC Low alarm
- BL – DC High alarm

### Displayed values following Code B:

Vout = output voltage of PSU

Ibat = for HL models (2 terminal DC Power Supply) it will be always 0.

Ipsu = Total PSU output current

+20°C = temperature measured by temp. sensor





### 13. CUSTOMISED MODELS

MODEL CODE	BASE MODEL	SPECIAL FEATURES
CSR228	SR750HL48FXL	Internal V/I meter, output voltage set to 56.4V
CSR229	SR750HL24TFSL	Internal V/I meter
CSR236	SR750HL24TFXL-485	Internal V/I meter

### 14. TERMS OF WARRANTY

Helios Power Solutions warrants this product for 24 months from date of shipment against material and workmanship defects. Liability under this warranty is limited to the replacement or repair of the defective product as long as the product has not been damaged through misapplication, negligence, or unauthorized modification or repair.